SLAC Traveler for LCLS Everson-Tesla Quadrupole Magnets

This traveler is intended to cover reception, preparation, mechanical fiducialization, and magnetic measurements of the Everson Tesla quadrupole magnets Thirty of these magnets were ordered, 12 for the injector, 7 for the linac, 7 for the LTU, and four are spares.

Receiving:

The following information is to be noted upon receipt of the magnets by the SLAC MFD group:

Received by	S. KYAN	name
Date received	4/3/06	mm/dd/yy
SLAC barcode number:		# 000 380
SLAC drawing number:	SA-380-309-00r0	
Vendor serial number from magnet label:	-	# 015
SLAC approved electrical safety covers?		ØN.
SLAC approved lifting eyes?		ØN.
Shipping Damage?		YO
Vendor tests passed on magnet label?		(Y)N

Place Duplicate BarCode Sticker Here:		`
083396	Place Duplicate BarCode Sticker Here:	

Preparation:

The following tasks are to be undertaken by the SLAC MFD group to prepare the magnets:


1) The mirror plates and standoffs are to be removed from these magnets. Please store these mirror plates and standoffs, and do not discard.

Mirror plates removed	G CASTAD	technician name
1. In places terro ved	2,(10)10	technician name

2) A beam direction arrow, with text "beam direction", is to be affixed to the top and connector side of the magnet, preferably by stenciling or rubber stamp, or by

sticker supplied by LCLS The arrow is to point away from the face of the magnet that has the coil bus wires. The coil bus wires are thus on the upstream side of the magnet. The positive and negative power leads are to be marked with '+' and '-' stickers, as shown in the wiring diagram.

3) A 14 gauge multistrand wire with red, non-teflon insulation is to be prepared with spade lugs and installed as shown in the wiring diagram below:

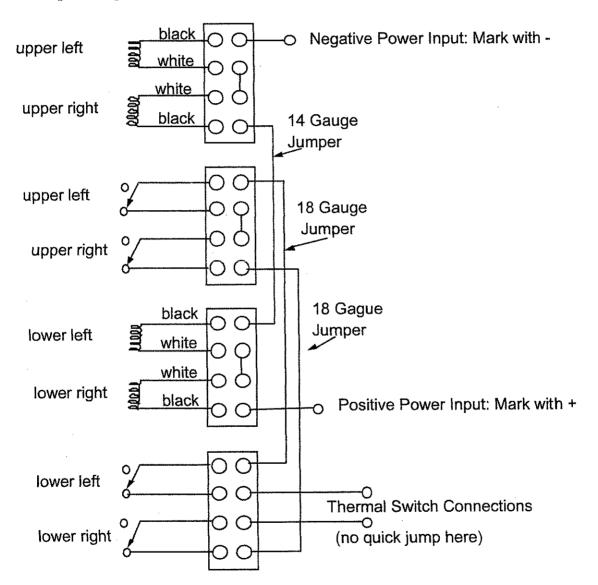

left and right refer to observer looking downstream, in the beam direction

	<u> </u>	
1 4 6 7 11 1	~ \(\lambda_1, \)	
14 Gauge Jumper installed	5.1641	installer name
1 / Odde o damper minumed	<u> </u>	


4) Two 18 gauge multistrand wire jumpers with non-teflon insulation are to be prepared with spade lugs and installed as shown in the wiring diagram above.

18 Gauge Jumpers installed	S.KYAN	installer name

5) The main magnet coil power leads must be connected according to the color scheme indicated in the wiring diagram, which is different from the way the magnets are as delivered. A terminal block type jumper is to be installed to connect the two white leads together.

pain power leads connected prrectly, with jumper	S. Ryan	installer name	
--	---------	----------------	--

6) The magnet is to be mounted a T-1 stage, oriented according to the correct beam direction, as shown in the photo:

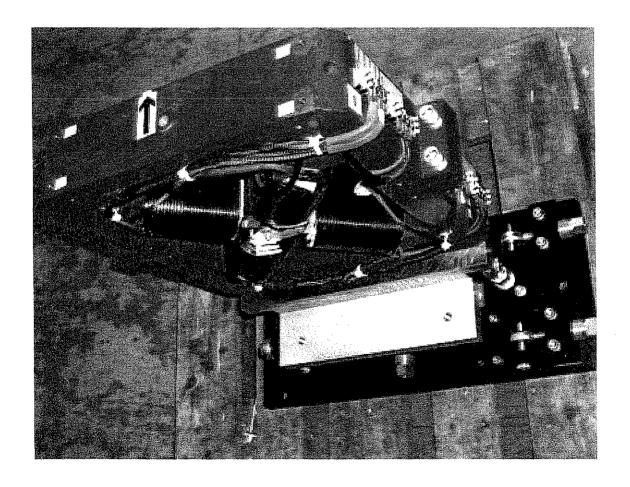

This requirement is for the first 15 magnets; the next 9 may be mounted on various stages.

T-1 Stage Installed	S. Kyan	installer name

Fiducialization:

Fiducialization may be done before or after magnetic measurements. The magnet is to be fiducialized by the CMM group. This will require the installation of removable tooling balls, location of the geometric axis of the pole tips of the magnet, and location of tooling balls with respect to the center of this geometric axis when the poles are aligned precisely at ± 45 degrees to horizontal and vertical axes. A CMM fiducialization report should be attached to this traveler.

Report attached	KEMH CABAN	Technician name
URL of on-line CM	IM fiducialization data:	
\\Web002\www-group\met\Qu	iality\FIDUCIAL REPORTS\LCLS QUA	DS/LCLS QUAD 000380

Magnetic Measurements:

Upon receipt of the magnet, the following information should be recorded:

Date of arrival to Mag. Meas. group:	06/16/	2001	mm/dd/yy
Responsible measurement operator name:	SDA		name

The magnetic measurements group is requested to perform the following tasks:

1) Verify that the magnets have mirror plates removed, jumpers correctly installed, main coil wiring corrected if necessary, and beam direction arrows put on. Also inspect magnet for any visible flaws and damage.

T ' ' OTZ	A	4 1
Incoming inspection UK		technician name

2) Connect the magnet to a bipolar 12-A power supply, preferably an *MCOR12*. Use care in turning these supplies on and off to limit current spikes that may occur. Run the magnet up to 8 A for ~30 minutes to warm it up (record temperature).

Power supply type	MCORTZ	text
Magnet connected and warmed up	SA	technician name
Magnet temperature achieved	25.9	deg-I) C

3) Standardize the magnet, starting from 0 to +12 A, then through 3 full cycles from +12 A to -12 A and back up to +12 A, finally ending at -12 A (the *MCOR12* ramp rate is not controllable, but a flat-top pause time of 10 seconds is desired at each maximum and minimum current).

Magnet standardized	SAL	technician name

In the following measurements, place the data in an on-line file folder:

URL of on-line magnet measurement data:

Into : H www- group slac. stanford . edu/met/Mag Mens / Mag Data/CCLS/quad /000386

Record the following information about the rotating coil:

Rotating Coil Designation	DC Z-54	name
Rotating coil radius	0.012313	meters

4) Maintaining the history cycle, measure length integrated $\int Gdl$ with a calibrated rotating coil, from -12 A to +12 A in 1-A steps, including zero (25 'up' measurements).

	strdat, rul	name and #

5) Still maintaining the history cycle, measure $\int Gdl$ with a calibrated rotating coil back down from +12 A to -12 A in 1-A steps, including zero (25 'down' measurements).

Gdl data file name & run #	etadal ai	name and #
Jour data life flatife of full #	3 harman	manio and n

6) Measure field harmonics at -12, -6, +1, +6, and +12 A settings using a 1-inch or 0.8-inch diameter probe.

Control Contro		
Harmonic data file name & run #		1
Harmonic data file name & run #		name and #
THAILINGING GAIA THE HAILIE & THE TE	hamat out	Haine and π

7) Measure the inductance and resistance of the full magnet

Inductance of full magnet	22.4	mH @ 100 Hz	\neg
Resistance of full magnet	0.392	Ohm	

Date of completion of SLAC tests:	06/17/2006	mm/dd/yyyy

Upon completion of tests, send traveler to Paul Emma, ms 103

8) Approval and Assignment by Paul Emma:

Magnet accepted:	Paullan	ÝN
Assigned Location	0502	Mad Deck Name


Upon completion, send traveler to Kathleen Ratcliffe at mailstop 18


Reference Information:

In a 24 hour measurement of the first article of this magnet type at 10 Amps, the temperature was found to rise to 31C over an ambient of 20C. See http://www-group.slac.stanford.edu/met/MagMeas/MAGDATA/LCLS/quad/QM-001/.

In a 36 hour test by Achim Wiedemann at 15.5 Amps, the temperature was found to rise to about 45 C from an ambient of 20C.

The magnet polarity is shown in the schematic diagram below:

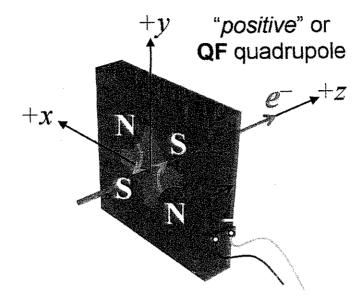

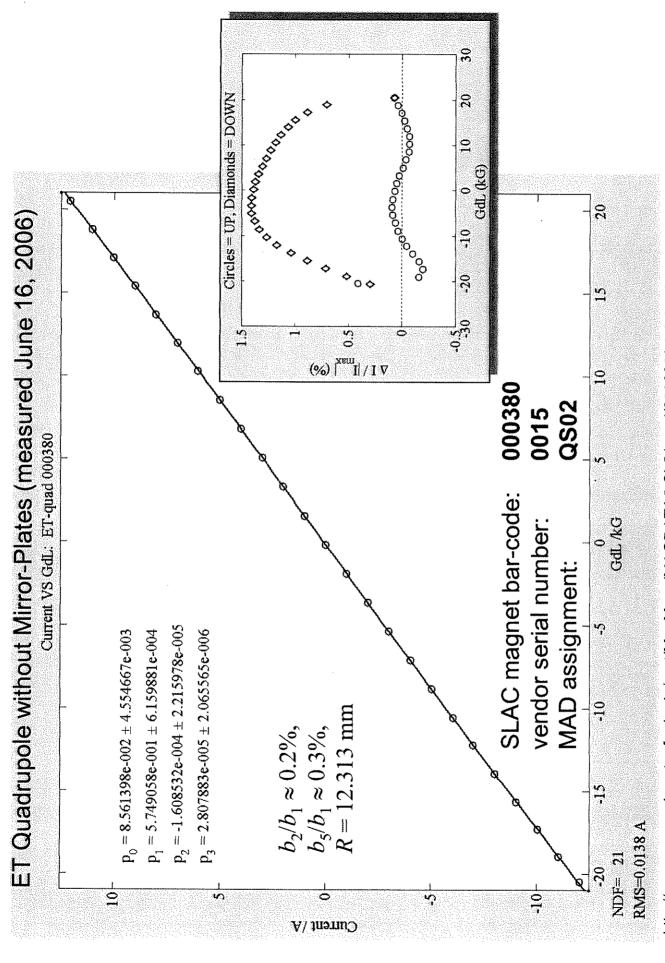

http://www-group.slac.stanford.edu/met/MagMeas/MAGDATA/LCLS/quad/000380/strdat.ru1